


rampCENTRE®

Access & Ramp ASSESSMENT GUIDE



Celebrating
20 YEARS
*of better access
for better living*

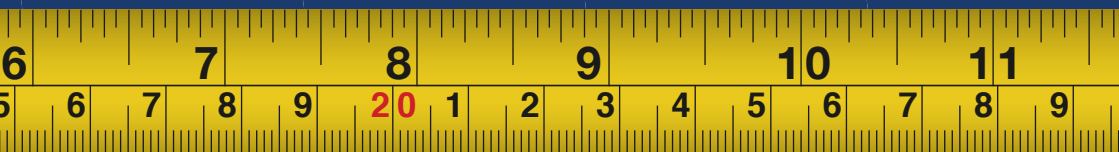

Access & Ramp ASSESSMENT GUIDE
























Welcome to the biggest ever range of mobility access solutions.

This is the only ramp guide you will ever need!

Ramp Specifier Guide

Choosing the correct ramp is important. Like finding the right size shoe or the correct glasses, it is essential that the best product is chosen, to ensure the users' needs are met. Please don't hesitate to give our experienced team a call if you have any queries.

1. What type?

Internal Steps/Thresholds	Steps/Stairs	Wood/Level Access Door Threshold	PVC Door Threshold	Vehicle Access
				
  	   	   	   	  

2. How steep?


1:6 (10°)*



Height

Acceptable in some cases for short threshold ramps.

1:8 (8°)*



Height

A useful balance between gradient and space suitable for portable ramps in some assisted applications and events, etc.


1:12 (5°)



Height

Often required by social services/local authorities. Minimum required by Building Regulations Document M for installed ramps.

1:15 (4°)



Height

Sometimes required by social services/local authorities for independent access, but typically for installed public access ramps.

*Assess safety/risk


Enable Access, AccessCentre, Aerolight, ExitMaster, RampCentre and Metro Mobility are registered trademarks of Enable Access. Welcome, Rollout-Trackway, Doorline, Ultralight, Perma-ramp, and Swift Ramp System are trademarks of Enable Access. These and all other product names, codes and images must only be used in reference to products supplied by Enable Access. We undertake a policy of continual review and research, which may lead to changes in product appearance and specification. Information is given for guidance only; customers take ultimate responsibility for purchasing decisions. Aerolight ramps are designed and optimised for disability/mobility type use - for other applications, please speak to a RampCentre product advisor. All dimensions, weights and conversions are approximate for your easy reference only and specific risk assessments (including all manual handling assessment and product use issues) should be carried out prior to the use of the equipment supplied. Stated capacities apply for combined weight of mobility devices and/or passenger/attendant. For technical help and details of your nearest stockist phone 020 8275 0375. © Copyright Enable Access.

3. How long?

- a. Measure the step height / level difference.
(Total height of steps or height to resting point on vehicle).



*Remember:
"The longer the
ramp, the easier
the slope".*

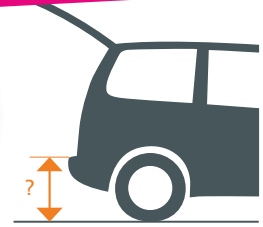


- b. Use the **Ramp Length Guide** (below) to decide which length you need.

Step height/level difference (up to)	Length at 1:6	Length at 1:8	Length at 1:12
10cm (4ins)	60cm (2ft)	80cm (2ft 8ins)	120cm (4ft)
15cm (6ins)	90cm (3ft)	120cm (4ft)	180cm (6ft)
20cm (8ins)	120cm (4ft)	160cm (5ft 4ins)	240cm (8ft)
25cm (10ins)	150cm (5ft)	200cm (6ft 8ins)	300cm (10ft)
30cm (1ft)	180cm (6ft)	240cm (8ft)	360cm (12ft)
45cm (1ft 6ins)	270cm (9ft)	360cm (12ft)	540cm (18ft)
60cm (2ft)	360cm (12ft)	480cm (16ft)	720cm (24ft)

4. Select

*Go to
page 17*

Select by height range

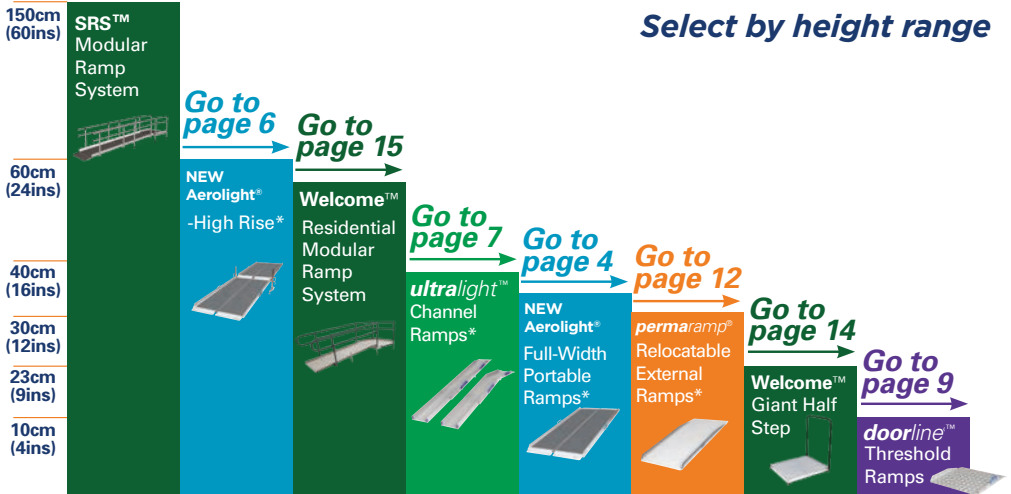

*Based on 1:8 gradient

Then turn to the product page and select the ramp you need.

Key to icons used:



rampCENTRE® NEW Aerolight®

Full-width portable ramps



Designed, Manufactured
& Stocked in the UK

Welcome to the all-new “WOW” ramp!

So **VERSATILE**, So **EASY-TO-USE**,
So **QUICK TO DEPLOY**, So **SAFE**,
So **STRONG**, Now Even **LIGHTER!**

- Great for all types of wheelchairs, rollators and scooters (2, 3, 4, 5 and 6 wheel types)
- Easy to see and walk on - with NEW reflective lip feature and full-width grip surface
- Available with different methods of folding to suit your needs
- NEW unique tapered lip design to fit narrow doorways

NEW Aerolight®-Xtra

Premium folding suitcase ramp



A proven and
popular workhorse



Custom sizes
available



7 sizes




2ft - 8ft long



Up to 450kg
capacity

- ▶ Folds and clips together for convenient, compact storage
- ▶ Flat underneath for the best possible step clearance
- ▶ Very easy to carry and deploy
- ▶ Full-width anti-slip surface provides excellent grip and folds inside when stored and carried for protection and ultimate safety
- ▶ Contrasting colour edge strip increases visibility

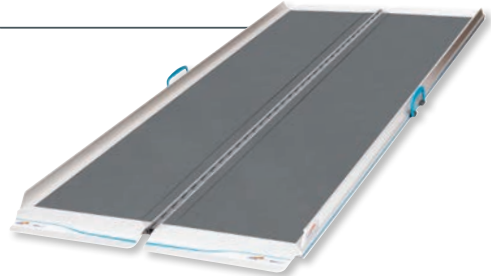

Code	Length	Capacity	Weight
AX6	60cm (2ft)	450kg (71st)	4.7kg (10lbs)
AX9	90cm (3ft)	450kg (71st)	6.5kg (14lbs)
AX12	120cm (4ft)	400kg (63st)	8.3kg (18lbs)
AX15	150cm (5ft)	350kg (55st)	10.1kg (22lbs)
AX18	180cm (6ft)	350kg (55st)	11.9kg (26lbs)
AX21	210cm (7ft)	300kg (47st)	13.7kg (30lbs)
AX24	240cm (8ft)	250kg (39st)	15.5kg (34lbs)

Ramp width (excluding handles) 76cm (30ins). Lip width 71.4cm (28.1ins).

NEW Aerolight®-Classic

Premium non-folding ramp

So easy – simply place and use



- Great portable solution for thresholds, kerbs and steps
- Well suited for public access
- Extremely stable; perfect for walking users


Code	Length	Capacity	Weight
AC6	60cm (2ft)	400kg (63st)	4.2kg (9lbs)
AC9	90cm (3ft)	350kg (55st)	5.4kg (12lbs)
AC12	120cm (4ft)	350kg (55st)	6.8kg (15lbs)
AC15	150cm (5ft)	350kg (55st)	8.2kg (18lbs)

Ramp width (excluding handles) 76cm (30ins). Lip width 71.4cm (28.1ins).

NEW Aerolight®-Lifestyle

Premium multi-folding ramp

Full-width safety and easy handling; great for out-and-about access and home use!

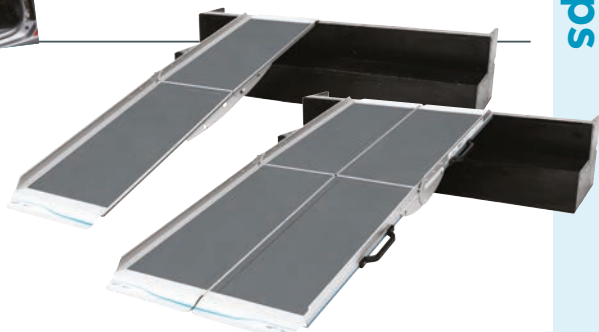

- New rigid handles for safety and ease-of-use
- Safety hinges with pinch protection
- Highest strength-to-weight ratio scooter ramp available
- Incredibly compact for storage
- Easy vehicle loading
- Two halves make it very light to carry and easy to store

Code	Length	Capacity	Weight (Each Half)	Stored Dimensions L x W x D
AL18	180cm (6ft)	350kg (55st)	7.4kg (16lbs)	95 x 37 x 25cm (37 x 15 x 10ins)
AL21	210cm (7ft)	300kg (47st)	8.3kg (18lbs)	110 x 37 x 25cm (43 x 15 x 10ins)
AL24	240cm (8ft)	250kg (39st)	9.3kg (21lbs)	125 x 37 x 25cm (49 x 15 x 10ins)
AL27	270cm (9ft)	250kg (39st)	10.3kg (23lbs)	140 x 37 x 25cm (55 x 15 x 10ins)

Ramp width (excluding handles) 74cm (29ins). Lip width 69.6cm (27.4ins).

NEW Aerolight® - Full-width portable ramps

NEW Aerolight®-High Rise

NEW Aerolight® combinations up to 16ft long



Achieve incredible lengths and heights with lightweight, portable ramps



4 sizes






10ft - 16ft long



Up to 350kg capacity

- Fully adjustable for any height and gradient
- Ramp joining support (AJ4) is also available separately
- Save £'s by buying as a kit

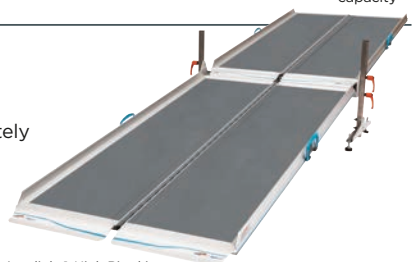

NEW Aerolight®-Xtra

AJ4 joining support

NEW Aerolight®-Xtra

NEW Aerolight®-High Rise kit

Code	Includes	Length	Capacity
HR30	1 x AJ4, 2 x AX15	300cm (10ft)	350kg (55st)
HR36	1 x AJ4, 2 x AX18	360cm (12ft)	350kg (55st)
HR42	1 x AJ4, 2 x AX21	420cm (14ft)	300kg (47st)
HR48	1 x AJ4, 2 x AX24	480cm (16ft)	250kg (39st)

Code	Description	Height	Capacity	Weight
AJ4	Joining Support: Includes easy-use handle fixings for height adjustment. Can be used with any NEW Aerolight® ramps.	11-45cm (4-18ins)	350kg (55st)	4.7kg (10lbs)

Ramp width (excluding handles) 76cm (30ins). Lip width 71.4cm (28.1ins).

NEW Aerolight®-Up&Over

NEW Aerolight®-Xtra and threshold ramp combinations



The complete up-and-over solution for thresholds - great for PVC thresholds





5 sizes



4ft - 8ft long

- Versatile, quick and easy to deploy
- Solves most threshold types and heights
- Portable and easy to store
- Seamless transition right over the threshold
- Save £'s by buying as a kit

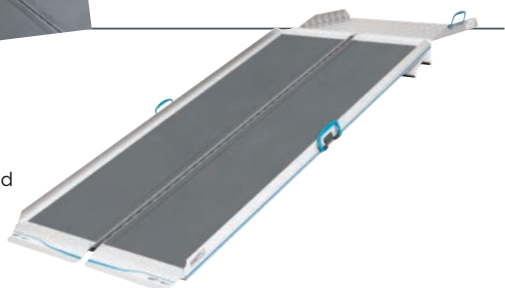

NEW Aerolight®-Xtra

Doorline-Multi (page 9)

NEW Aerolight®-Up&Over kit

Code	Includes	External Ramp Length	Capacity
U012	1 x DM5, 1 x AX12	120cm (4ft)	300kg (47st)
U015	1 x DM5, 1 x AX15	150cm (5ft)	300kg (47st)
U018	1 x DM5, 1 x AX18	180cm (6ft)	300kg (47st)
U021	1 x DM5, 1 x AX21	210cm (7ft)	300kg (47st)
U024	1 x DM5, 1 x AX24	240cm (8ft)	250kg (39st)

rampCENTRE® ultralight™

Channel ramps

Exceptionally well crafted in anodised aluminium, the Ultralight original perforated channel ramps offer an outstanding combination of compact storage and ease of use.

Anodised for durability • Unique built-in grip surface • Fold away handles • Wide channels

- Great for narrow doorways
- Commonly used for residential and vehicle access
- Great for standard wheelchairs and four wheel scooters

- Very compact for storage
- Extremely portable
- Great for cross-slopes

ultralight™-rigid



PR06 &
PHB06

Storage bag also available
Code: PHB06

Code (Pair)	Length	Width (Internal Channel)	Capacity (Pair)	Weight (Each Half)
PR06	55cm (1ft 10ins)	21cm (8ins)	400kg (63st)	1.5kg (3lbs)

Immense capacity and very lightweight



ultralight™-folding

Ideal for those on the move



Code (Pair)	Length	Capacity (Pair)	Weight (Each Half)
PF11	110cm (3ft 7ins)	300kg (47st)	3.6kg (8lbs)
PF15	150cm (4ft 11ins)	300kg (47st)	4.6kg (11lbs)
PF20	200cm (6ft 7ins)	250kg (39st)	6kg (14lbs)

Internal channel width 21cm (8ins)

ultralight™-telescopic

Unlimited adjustability



Code (Pair)	Length		Width (Internal Channel)	Capacity (Pair)	Weight (Each Half)
	Max	Min			
PT12-2	120cm (3ft 11ins)	75cm (2ft 5ins)	19cm (8ins)	400kg (63st)	3.6kg (8lbs)
PT20-2	202cm (6ft 8ins)	117cm (3ft 10ins)	19cm (8ins)	300kg (47st)	5.8kg (13lbs)
PT20-3	199cm (6ft 6ins)	87cm (2ft 10ins)	18cm (7ins)	300kg (47st)	6.1kg (14lbs)
PT29-3	288cm (9ft 5ins)	117cm (3ft 10ins)	18cm (7ins)	250kg (39st)	8.2kg (18lbs)


3
Section

ultralight™ -combi

Amazing versatility for straight or up-and-over use

Your benefits:

- Low kerbs and long bevel sides greatly increase clearance for scooters and power chairs
- Good choice for bridging a threshold with unequal levels each side
- Wide channels as standard, with extra-width options for larger mobility devices (see PCVW codes)
- Seriously lightweight, and incredibly compact for storage and stowing in a vehicle
- One solution for many applications

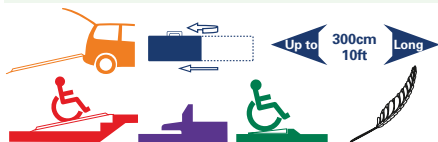

Code (Pair)	Length		Width (Internal Channel)	Capacity (Pair)	Weight (Each Half)
	Max	Hinged Section			
PC21-3	207cm (6ft 9ins)	75cm (30ins)	19cm (8ins)	300kg (47st)	6.5kg (14lbs)
PC28-3	276cm (9ft 1ins)	100cm (39ins)	19cm (8ins)	250kg (39st)	8.4kg (19lbs)
PCW21-3	210cm (6ft 11ins)	75cm (30ins)	25cm (10ins)	300kg (47st)	8kg (18lbs)
PCW28-3	300cm (9ft 10ins)	106cm (42ins)	25cm (10ins)	250kg (39st)	11.4kg (23lbs)

Extra Width

Rollout-Trackway™




Instant access solution for grass, gravel, and other uneven surfaces

- Great for events and short-term uses, and can be left in place for long-term use
- Great value for money due to extreme durability
- Totally weather-resistant with full drainage - perfect for the unpredictable British weather

Code	Length
RT15	150cm (4ft 11ins)
RT25	250cm (8ft 2ins)
RT50	500cm (16ft 5ins)

Width 90cm (35.4 ins)

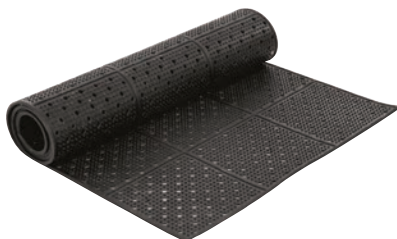

rampCENTRE[®] doorlineTM

Threshold ramps

Whatever the threshold, the Doorline range can cope. For the few situations our standard range cannot deal with, custom ramps can be made exactly to your specifications.

Huge range • **Adjustable options** • **Easy-to-use** • **Excellent finish**


- Great for overcoming door thresholds
- Very simple to deploy
- Can be used either or both sides of a door
- Removable and leave-in-place solutions available

“Designed to overcome PVC door thresholds”

doorlineTM-multi

Your benefits:

- Unique lip design with rubber anti-slip to safely eliminate threshold damage
- Designed for use with our NEW Aerolight and Ultralight ramps to easily bridge any threshold – see page 6
- Anodised finish for many years of service
- Extremely lightweight for quick and easy use, with full 300kg capacity
- Comfortable, fold-away, rattle-free handle

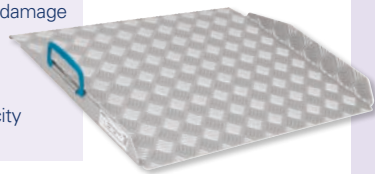


Code	Max Recom. Height	Total Length	Capacity	Weight
DM5	10cm (3.9ins)	57.5cm (23ins)	300kg (47st)	3.4kg (7.5lbs)
DM7	13cm (5.1ins)	74cm (29ins)	300kg (47st)	4.8kg (10.6lbs)

Width 70cm (28ins)



doorlineTM-wedge

“Simple threshold solution”

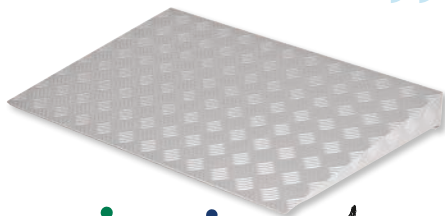

Custom versions available

Code	Height	Length	Capacity	Weight
DW4	4cm (1.6ins)	25cm (10ins)	300kg (47st)	2.6kg (6lbs)
DW6	6cm (2.4ins)	40cm (16ins)	300kg (47st)	3.1kg (7lbs)
DW8	8cm (3.1ins)	50cm (20ins)	300kg (47st)	4kg (9lbs)
DW10	10cm (3.9ins)	60cm (24ins)	300kg (47st)	5kg (11lbs)

Width 72cm (28ins)

doorlineTM-bridge

“Bridge almost any threshold!”



Code	Height	Length	Capacity*	Weight
DB4	4cm (1.6ins)	56cm (22ins)	300kg (47st)	3.3kg (7lbs)
DB6	6cm (2.4ins)	60cm (23ins)	300kg (47st)	4kg (9lbs)
DB8	8cm (3.1ins)	81cm (32ins)	300kg (47st)	6.8kg (15lbs)
DB10	10cm (3.9ins)	100cm (39ins)	300kg (47st)	8.5kg (19lbs)

Width 70cm (28ins) *Capacity assumes ramp rests on threshold


doorline™ -variawedge



Adjust height for any threshold up to 10cm (4ins)


Your benefits:

- Fully adjustable in under a minute (spanner supplied in kit)
- Extremely durable designer-finish to suit any internal décor
- Can be fixed in place for maximum stability and security
- Rubber strip to grip and protect floor
- Remove and readjust for re-use elsewhere
- Ask us about our triple pack demo kit!

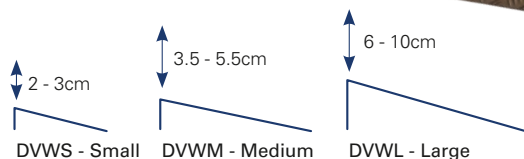

Code	Length	Weight
DVWS	15cm (5.9ins)	1.3kg (2.9lbs)
DVWM	25cm (9.8ins)	2.1kg (4.6lbs)
DVWL	50cm (19.7ins)	5.6kg (12.3lbs)

Width 74cm (29.1ins). Capacity 300kg (47st).

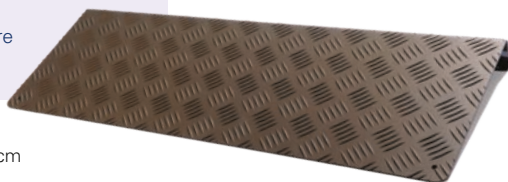


Assemble or adjust for re-use in less than a minute!

doorline™ -neatedge




Unobtrusive, strong and versatile wedge ramps up to 152cm (5ft) wide

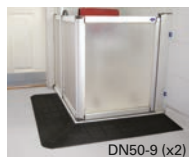

DN50-9 (x2)



Chamfered edges allow easy access from any angle

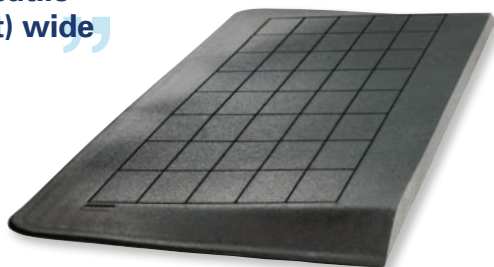

Code	Height	Length	Width	Chamfered Edges (Y/N)
DN15-9	1.5cm (0.6ins)	12cm (4.5ins)	90cm (35ins)	Y
DN25-9	2.5cm (1ins)	20cm (8ins)	90cm (35ins)	Y
DN50-9	5cm (2ins)	40cm (16ins)	90cm (35ins)	Y
DN75-9	7.5cm (3ins)	60cm (24ins)	90cm (35ins)	Y
DN2	2.2cm (0.9ins)	20cm (8ins)	107cm (42ins)	Y
DN3	3.2cm (1.3ins)	31cm (12ins)	107cm (42ins)	Y
DN4	4.5cm (1.8ins)	46cm (18ins)	127cm (50ins)	Y
DN5	5.1cm (2.0ins)	53cm (21ins)	152cm (60ins)	Y
DN6	5.7cm (2.3ins)	76cm (30ins)	76cm (30ins)	N
DNF	Adhesive for permanent fixing (290ml), including application gun			

Capacity 500kg (79st). Can be trimmed or cut to size as required.

doorline™-neatslope



doorline™ - versatile threshold ramps

Eliminate low threshold trip hazards!

Your benefits:

- Available in 3 useful heights
- Easy to trim if required
- Available with or without self-adhesive backing





Code	Height	Length	Self Adhesive Y/N
DNS6	0.6cm (0.25ins)	6cm (2.4ins)	N
DNS6A	0.6cm (0.25ins)	6cm (2.4ins)	Y
DNS10	1cm (0.4ins)	10cm (3.9ins)	N
DNS10A	1cm (0.4ins)	10cm (3.9ins)	Y
DNS16	1.6cm (0.6ins)	15cm (5.9ins)	N
DNS16A	1.6cm (0.6ins)	15cm (5.9ins)	Y

Width 90cm (35.4ins). Capacity 300kg (47st).



doorline™-custom

Specially made to your specifications

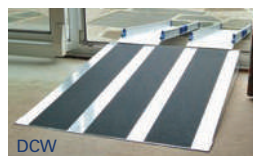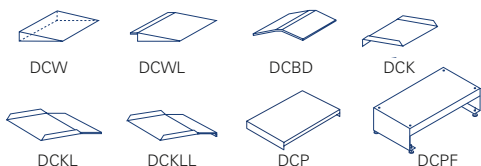

DCBD



These ramps are individually manufactured to your specified sizes.

Choose from 8 styles for the very few applications our stock products cannot solve.


Build-a-Slope™



Totally modular threshold ramp

Your benefits:

- Easily configured for any application
- Totally weatherproof
- Quick to assemble and install
- Choose from 4 popular kits
- Compatible with other brands

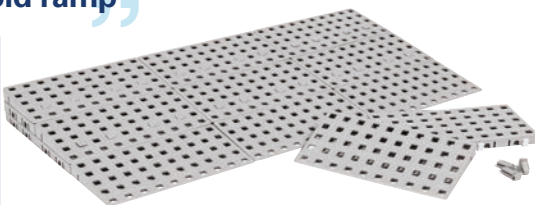

Code	Max. Height	Length
BSK1	4cm (1.6ins)	25cm (10ins)
BSK2	7.5cm (3ins)	50cm (20ins)
BSK3	11cm (4.3ins)	75cm (30ins)
BSK4	15cm (5.9ins)	100cm (39ins)

Width 75cm (29.5ins). Capacity 400kg (63st).



rampCENTRE® permaramp®



Designed, Manufactured
& Stocked in the UK



A concept which totally transforms wheelchair access, the Permaramp range is designed to be easily adjusted and fixed down or left in place for every type of threshold.


Cut-away kerbs • Easy installation • Extremely durable

- ▶ Great for semi-permanent access
- ▶ Avoid big installation projects and construction mess
- ▶ Can be left in place as long as required then re-used elsewhere
- ▶ Quick and strong access solutions
- ▶ Unique Gripdeck™ surface for incredible grip and sustained outside use

permaramp®-original

Your benefits:

- ▶ Excellent for wooden door thresholds
- ▶ Contrasting colour safety edge strips increase visibility
- ▶ Superwide 90cm width version available as well as standard 76cm width: perfect for single outward opening doors, and a great bariatric ramp solution
- ▶ Fixing options at top and bottom for secure location
- ▶ Well suited for scooters, mobility devices and sports wheelchairs
- ▶ Up to 400kg (63 stone) capacity!

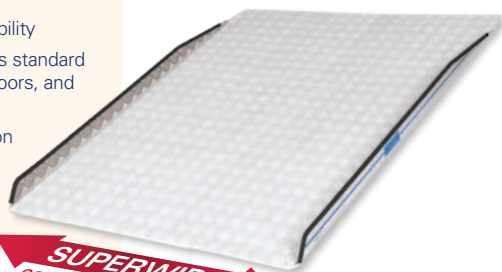

“Instant installed ramp solution available in 2 widths and 6 lengths”



EXTRA
WIDTH


Code	Length	Width	Capacity	Weight
PO9	90cm (3ft)	76cm (30ins)	400kg (63st)	8.5kg (19lbs)
PO12	120cm (4ft)	76cm (30ins)	400kg (63st)	12kg (26lbs)
PO15	150cm (5ft)	76cm (30ins)	400kg (63st)	15kg (33lbs)
PO18	180cm (6ft)	76cm (30ins)	400kg (63st)	18.5kg (41lbs)
PO21	210cm (7ft)	76cm (30ins)	350kg (55st)	22kg (49lbs)
PO24	240cm (8ft)	76cm (30ins)	300kg (47st)	25kg (55lbs)
POW9	90cm (3ft)	90cm (35.4ins)	400kg (63st)	10kg (22lbs)
POW12	120cm (4ft)	90cm (35.4ins)	400kg (63st)	14kg (31lbs)
POW15	150cm (5ft)	90cm (35.4ins)	400kg (63st)	18kg (40lbs)
POW18	180cm (6ft)	90cm (35.4ins)	400kg (63st)	22kg (48lbs)
POW21	210cm (7ft)	90cm (35.4ins)	350kg (55st)	26kg (58lbs)
POW24	240cm (8ft)	90cm (35.4ins)	300kg (47st)	30kg (65lbs)

permaramp®-adjust

Totally adjustable and self-supporting, great for PVC thresholds

Your benefits:

- Easy height adjustment and installation from above
- Designed to clear protruding thresholds and sills
- Fix to any firm flat or sloping surface
- Telescopic legs can be adjusted to accommodate different threshold types, and give total height adjustment from 7.5cm (3ins) to 25cm (10ins) high
- Entry flap accessory available to transition right into the property (see below)
- All lengths available in Superwide 90cm option: a great bariatric ramp solution and perfect for single outward opening doors, and extra-wide mobility devices

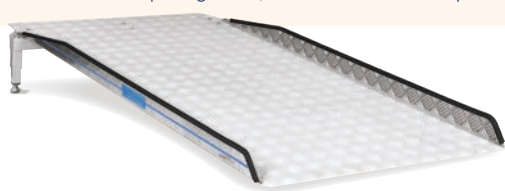

Code	Length	Width	Capacity	Weight
PA9	90cm (3ft)	76cm (30ins)	400kg (63st)	12.5kg (28lbs)
PA12	120cm (4ft)	76cm (30ins)	400kg (63st)	16kg (35lbs)
PA15	150cm (5ft)	76cm (30ins)	400kg (63st)	19kg (42lbs)
PA18	180cm (6ft)	76cm (30ins)	400kg (63st)	22.5kg (50lbs)
PA21	210cm (7ft)	76cm (30ins)	350kg (55st)	26kg (57lbs)
PA24	240cm (8ft)	76cm (30ins)	300kg (47st)	29kg (64lbs)
PAW9	90cm (3ft)	90cm (35.4ins)	400kg (63st)	14kg (22lbs)
PAW12	120cm (4ft)	90cm (35.4ins)	400kg (63st)	18kg (40lbs)
PAW15	150cm (5ft)	90cm (35.4ins)	400kg (63st)	22kg (48lbs)
PAW18	180cm (6ft)	90cm (35.4ins)	400kg (63st)	26kg (57lbs)
PAW21	210cm (7ft)	90cm (35.4ins)	350kg (55st)	30kg (66lbs)
PAW24	240cm (8ft)	90cm (35.4ins)	300kg (47st)	34kg (75lbs)

EXTRA WIDTH



permaramp®-entry flap

The ultimate semi-permanent PVC threshold bridging accessory

Your benefits:

- Flap accessory for Permaramp-Adjust (see above)
- Hand strap for fast and easy operation
- Excellent for sliding and inward opening doors
- Unique Gripdeck™ surface on both sides



Code	Length	Width	Capacity	Weight
PE5	45cm (18ins)	72cm (28.3ins)	300kg (47st)	4.8kg (10.6lbs)

NOTE: Only for use with standard width Permaramp-Adjust, ordered separately

rampCENTRE® WELCOME®

Residential modular ramp and step systems

This residential ramp system has been carefully developed to suit your budget, needs and timescales. It is incredibly good value, whilst being very versatile.

Attractive • Excellent value • Easy to install • Durable • Totally modular

- Perfect for independent access
- Used when permanent access is required
- Handrail options available
- Easy to remove or modify when needs change, avoiding disruptive demolition work



Designed, Manufactured
& Stocked in the UK



WELCOME® - giant half step™

“Substantial giant-size half steps for use
with rollators and walking frames”

Your benefits:

- 2 huge sizes: Xtra-Large to take user with rollator and Large to take user with walking frame
- Can be fixed in place for safety and security with optional self-levelling fix-down feet (two supplied with handrail kit)
- Fully height-adjustable from 7.5 to 12.5cm high with no extra tools required
- Kerb accessories available to fit any side, to prevent feet or mobility device/walking sticks wandering off the side



Code	Min Height	Max Height	Capacity	Weight
WHSL	7.5cm (3ins)	12.5cm (4.9ins)	250kg (39st)	10kg (22lbs)
WHSXL	7.5cm (3ins)	12.5cm (4.9ins)	250kg (39st)	12kg (26.5lbs)

Half Step Accessories

HANDRAILS	(Supplied with 2 fix-down feet)
WHS60	Handrail for 60cm (24ins) sides
WHS75	Handrail for 75cm (29.5ins) sides
WHS90	Handrail for 90cm (35.4ins) sides
KERBS	(Use handrails together with kerbs to avoid trip hazard)
WHK60	Safety kerb for 60cm (24ins) sides
WHK75	Safety kerb for 75cm (29.5ins) sides
WHK90	Safety kerb for 90cm (35.4ins) sides
FIX-DOWN FEET	
WFDF	Adjustable fix-down feet (2pk)

WELCOME® - ramp system™



Designed, Manufactured
& Stocked in the UK

**Attractive modular residential ramp solution
that suits your budget, needs and timescales**

The easily specified and fitted Welcome® modular ramp system represents outstanding quality and value - it's 100% modular, and available for next day delivery!



Fast one-person install



Small van friendly



100% modular



Next day delivery



**10 YEAR
DESIGN LIFE**



Your benefits:

- Complies fully with Building Regulations Document M for dwellings
- CAD drawings available for any variation on request

HANDRAILS



Powder coated pre-galvanised steel provides a durable yet 'warm to the touch' handrail.

PLATFORM



2 platform sizes available. If a greater size is required, simply join them together.

DOORPLATE



Standard 80cm doorplate supplied with every system - Self supporting + wide versions also available.

ADJUSTABLE LEGS



Height adjustable legs can be adjusted to suit ground variations and a huge range of step heights.

gripdeck™ technology



Incredible Grip
rain or shine

GRIPDECK™ TECHNOLOGY

Welcome® offers an excellent all-weather grip surface while also being high heel and pet friendly too.

**400kg
CAPACITY**



WELCOME® - residential modular ramp system

WELCOME® - colours

NEW

The Welcome ramp systems are now available in a carefully selected range of colours – from stock, and at no extra cost!

Original Graphite with Safety Yellow handrails



Garden Green



Heritage Brown



Colour Options



Original Graphite

The standard Welcome colour is a carefully selected and universally appealing soft dark grey.



Safety Yellow

A carefully selected rich yellow, perfect for visual safety needs. (handrails only).



Garden Green

A traditional deep green, perfect for garden environments.



Heritage Brown

A dark, rich brown to perfectly complement traditional and heritage buildings.


Choose colours to match in or contrast with every building as required!



WELCOME® - accessories

Self-supporting doorplate for 122cm platform sides

No more cracked PVC door thresholds!

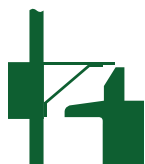

Steps

Easy access for all users.



Soft-ground leg bearer

Stop legs from sinking in soft ground.



COMING SOON!

Welcome Platform Gate

Available in Original Graphite colour only




Welcome Platform Door Entry Flap



rampCENTRE® swiftrampsystem™

Modular ramp system


Ideally suited to public access and corporate applications, this galvanised steel ramp system is exceptionally adaptable, with many beneficial options available.

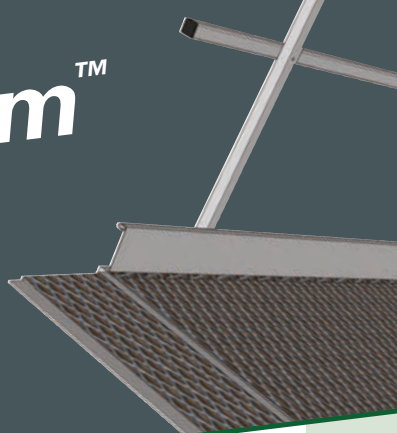

“Extremely strong and adaptable,
in three widths and up to 1.5m high.”





swiftrampsystem™ - modular ramp system

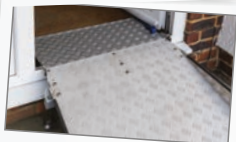

TOP TIPS!

1. Refer to Ramp Specifier Guide (p2/3)
2. Always take photographs
3. Make a rough sketch and add a few dimensions

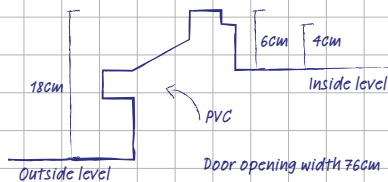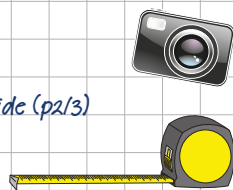



Celebrating
20 YEARS
of better access
for better living

...your total mobility access ramp solution, available from:

Step height →

DE-ARAG04/18

